





37	SAFETY VALVE CONNECTION NIPPLE	D-EV.301	D-EV.301	D-EV.301	D-EV.301	D-EV.302	D-EV.302
38	COUPLING FOR SAFETY VALVE	D-EV.303	D-EV.303	D-EV.303	D-EV.303	D-EV.303	D-EV.303
39	SAFETY VALVE	D-EV.300	D-EV.300	D-EV.300	D-EV.300	D-EV.300	D-EV.300
40	EXPANSION TANK	D-GT.400	D-GT.400	D-GT.405	D-GT.405	D-GT.405	D-GT.405
41	PLASTIC WASHER	D-GT.407	D-GT.407	D-GT.407	D-GT.407	D-GT.407	D-GT.407
42	RECORD	D-GT.408	D-GT.408	D-GT.408	D-GT.408	D-GT.408	D-GT.408
43	AIR VALVE	D-GT.409	D-GT.409	D-GT.409	D-GT.409	D-GT.409	D-GT.409
44	FITTING "T"	D-GT.410	D-GT.410	D-GT.410	D-GT.410	D-GT.410	D-GT.410
45	MANOMETER SENSOR STOPPER	D-PD.057	D-PD.057	D-PD.057	D-PD.057	D-PD.057	D-PD.057
46	FRONT CABIN PLASTIC HOLDER	D-KS.600	D-KS.600	D-KS.600	D-KS.600	D-KS.600	D-KS.600
47	CONTROL PANEL	D-KP.700	D-KP.700	D-KP.700	D-KP.700	D-KP.700	D-KP.700
48	SEGMENT FOR THERMOSTAT BULB	D-PM.016	D-PM.016	D-PM.016	D-PM.016	D-PM.016	D-PM.016
49	FRONT CABIN STEEL PIECE	D-KS.580	D-KS.580	D-KS.580	D-KS.580	D-KS.580	D-KS.580
50	REAR CABIN ASSEMBLING SCREWS	D-KS.535	D-KS.535	D-KS.535	D-KS.535	D-KS.535	D-KS.535
51	CONTROL PANEL ASSEMBLING SCREWS	D-KP.710	D-KP.710	D-KP.710	D-KP.710	D-KP.710	D-KP.710
52	CABIN PARTS ASSEMBLING SEGMENT SPRING	D-KS.800	D-KS.800	D-KS.800	D-KS.800	D-KS.800	D-KS.800
53	CABIN PARTS ASSEMBLING SEGMENT PIN	D-KS.810	D-KS.810	D-KS.810	D-KS.810	D-KS.810	D-KS.810
54	CABIN PARTS ASSEMBLING SEGMENT PIN NUT	D-KS.820	D-KS.820	D-KS.820	D-KS.820	D-KS.820	D-KS.820